

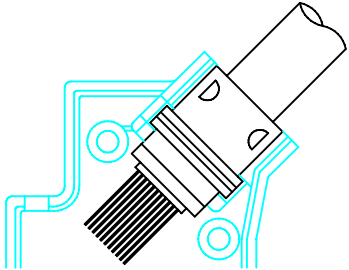


**ASSEMBLY INSTRUCTIONS:**

1. PREPARE CABLE AS REQUIRED TO ASSEMBLE TO THE CONNECTOR
2. CHOOSE THE STRAIN RELIEF HALVES THAT MOST CLOSELY MATCH THE CABLE O/D AND PLACE ONE INTO EACH RECESS. THEY DO NOT NEED TO BE MATCHING HALVES
3. PLACE THE CABLE INTO THE STRAIN RELIEF IN ONE HALF OF THE PLASTIC HOOD. ENSURE THE CABLE IS PRESSED INTO THE STRAIN RELIEF PIECE
4. SNAP THE JACKSCREWS INTO POSITION
5. PLACE THE OTHER HALF OF THE PLASTIC HOOD INTO PLACE AND TIGHTEN TOGETHER WITH THE ASSEMBLY SCREWS AND NUTS

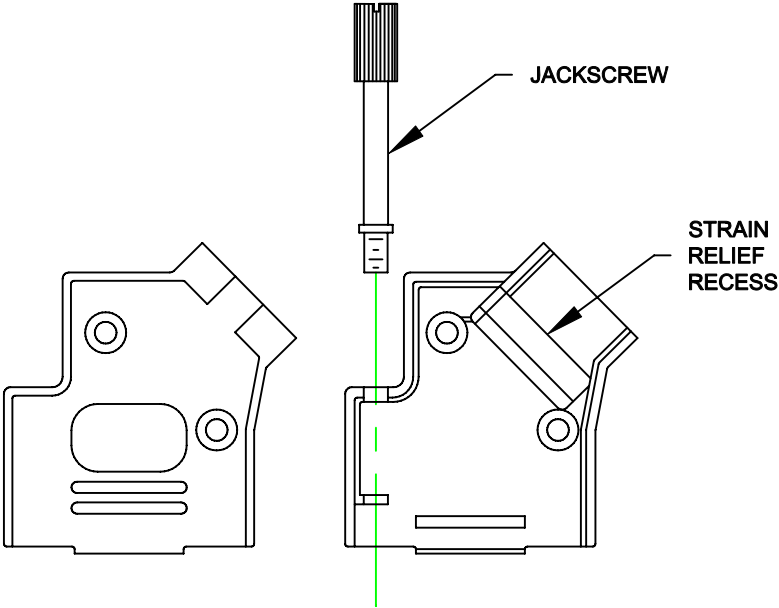

ITEM No. 2 & 3

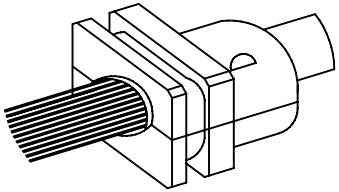

CABLE WITHOUT SHIELD OR GROUND

**RoHS COMPLIANT**

**PLASTIC**

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.		DRAWN: <b>C. SMITH</b>	DATE: <b>03-21-06</b>	
			CHECKED: <b>X</b>	DATE: <b>X</b>	
<h1>NorComp</h1>			SCALE: <b>N.T.S.</b>	SHEET <b>1</b> OF <b>2</b>	REV <b>0</b>
			DWG NO. <b>BACKSHELL - 971 SERIES</b>		

## ASSEMBLY INSTRUCTIONS:



ITEM No. 2, 3 & 4

- THE STRAIN RELIEF RECESS AREA**
- 5. SNAP THE JACKSCREWS INTO POSITION**
  - 6. PLACE THE OTHER HALF OF THE DIE CAST HOOD INTO PLACE AND TIGHTEN TOGETHER WITH THE ASSEMBLY SCREWS**

**DIE CAST &  
METALIZED  
PLASTIC**

**RoHS COMPLIANT**