

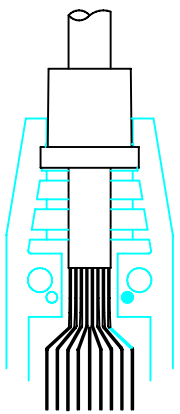


ASSEMBLY INSTRUCTIONS:

1. CHOOSE THE STRAIN RELIEF THAT MOST CLOSELY MATCH THE CABLE O/D AND SLIDE OVER CABLE JACKET
2. PREPARE CABLE ENDS, CONNECT TO CONNECTOR
3. INSERT THE STRAIN RELIEF INTO A SLOT IN ONE HALF OF THE HOOD. IF LESS FLEX IS DESIRED IN THE STRAIN RELIEF, THE STRAIN RELIEF MAY BE INSERTED INTO A LOWER SLOT IN THE HOOD
4. INSERT THE JACKSCREWS IN THE SADDLE WASHERS. PLACE THE JACKSCREWS INTO THE HOOD WITH THE CABLE
5. PLACE THE OTHER HALF OF THE HOOD ON TOP OF THE FIRST HALF, MAKING SURE NO WIRES ARE PINCHED
6. HOLDING THE HOOD HALVES TOGETHER, INSERT THE MOUNTING SCREWS THROUGH THE HOODS IN OPPOSITE DIRECTIONS. TIGHTEN THE TWO HALVES TOGETHER

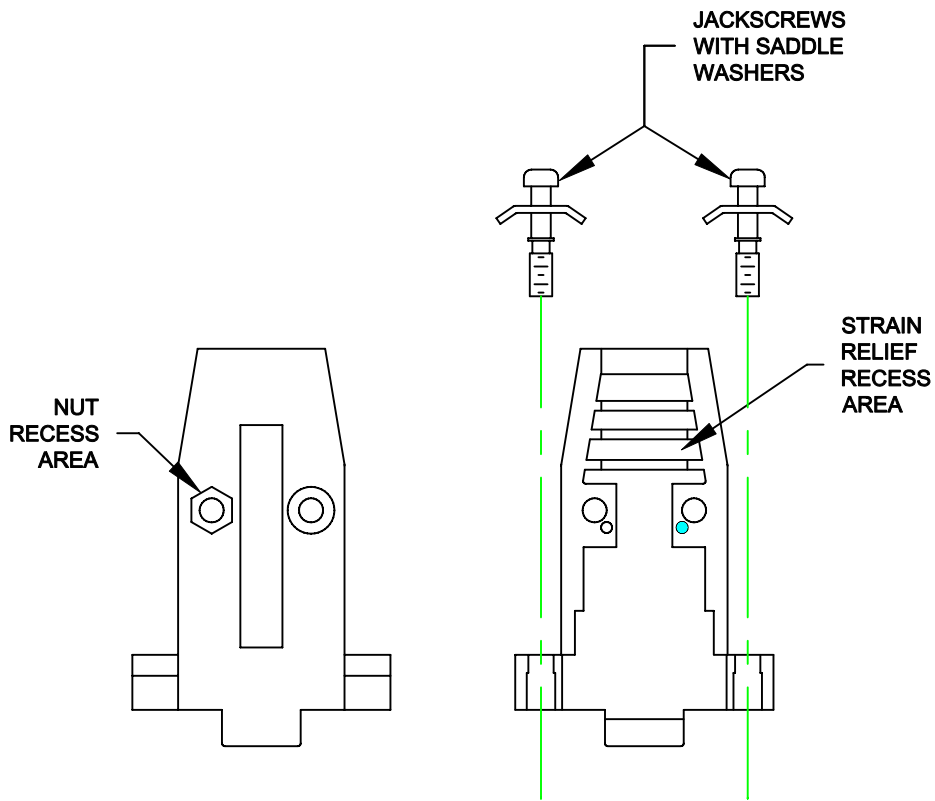


ITEM No. 1 & 3

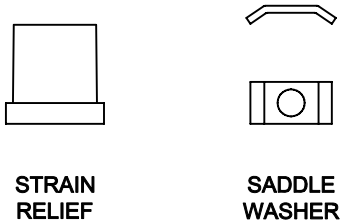

RoHS COMPLIANT

PLASTIC

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.		DRAWN: C. SMITH	DATE: 03-30-06	
			CHECKED: X	DATE: X	
<h1>NorComp</h1>			SCALE: N.T.S.	SHEET 1 OF 2	REV 0
			DWG NO. BACKSHELL - 979 SERIES		

